


glue the torpedo tubes from the inside    start the bottom cladding with this section

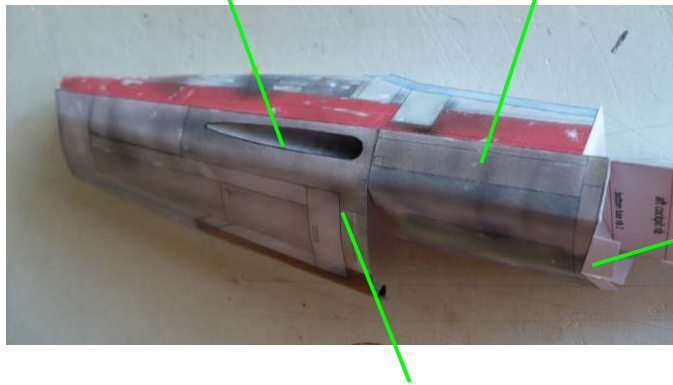

dry-fit the skin by wrapping it around the ribs from side to side. If there's some space left between the rib and the cladding, attach small strips of paper to fill it

attach the skin to the fuselage base frame on one of the sides, then glue it to the ribs and finish on the other side

don't glue together yet, it'll help fitting the aft section easily

glue the aft section to the lower fuselage part, then join the upper and lower fuselage (red lines). Attach the aft cap to finish this section.

